
USER MANUAL EBT470

WOODBRIDGE®

Remote Control Illustration

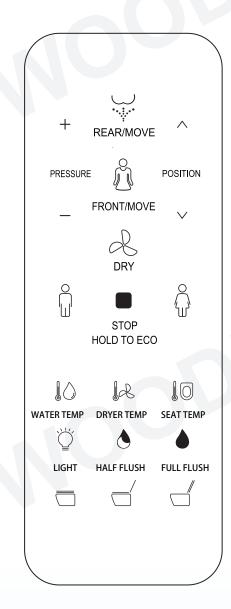

Thank you for choosing our product.Please read the instructions carefully before installation and keep it available for future maintenance or reference.

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time) Or Email:help@woodbridgebath.com

www.woodbridgebath.com

WOODBRIDGE®

REMOTE CONTROL ILLUSTRATION

Content

Installation preparation 04 -. . .

01. Remote control installation	2
Usage Instruction	
01. Remote control illustration	4
02. Rear/Front cleaning operation	5
03. Dry operation	5
04. Water volume adjustment	6
05. Spray nozzle position adjustment	6
06. Energy saver	7
07. Auto function	7
08. Temperature adjustment	8
09. Night light	8
10. Full flush/ Half flush ———————————	8
11. Open/close by remote controller	9
12. Other Operations	1(

1

WOODBRIDGE

REMOTE CONTROL ILLUSTRATION


Installation Preparation

Remote control installation


Remote control bracket installation

(1) Place the remote control bracket upright on the pre-installed area of the wall and mark the location of the two mounting holes on the wall with a marker. Drill a hole on the marked position with a 6 mm diameter drill bit, with a depth of 35 mm. (When determining the installation location, make sure the person sits on the seat is able to grab the remote control.)


R

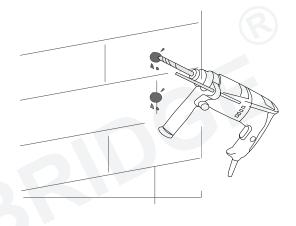

(3) Put batteries into remote control and replace the cover.

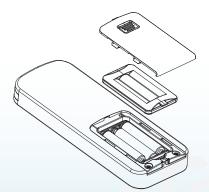

(2) Insert wall anchors onto the holes, align remote control bracket to match with the drilled hole and secure with screws. Covered the holes with silicone gasket.

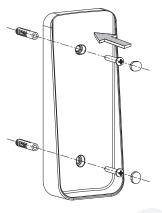


(4) Place the remote control on the wall bracket




2

Notice: Don't install and use the product in damp places such as shower room. Don't place the product in a place where it is easily exposed to water.

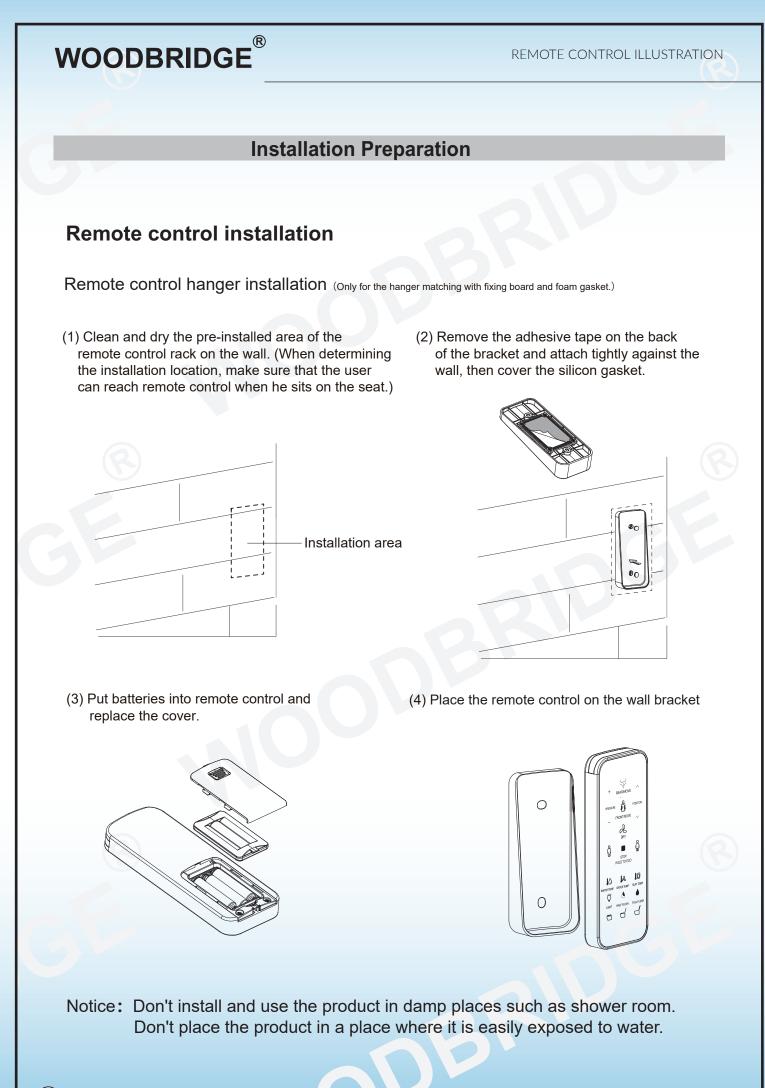

3

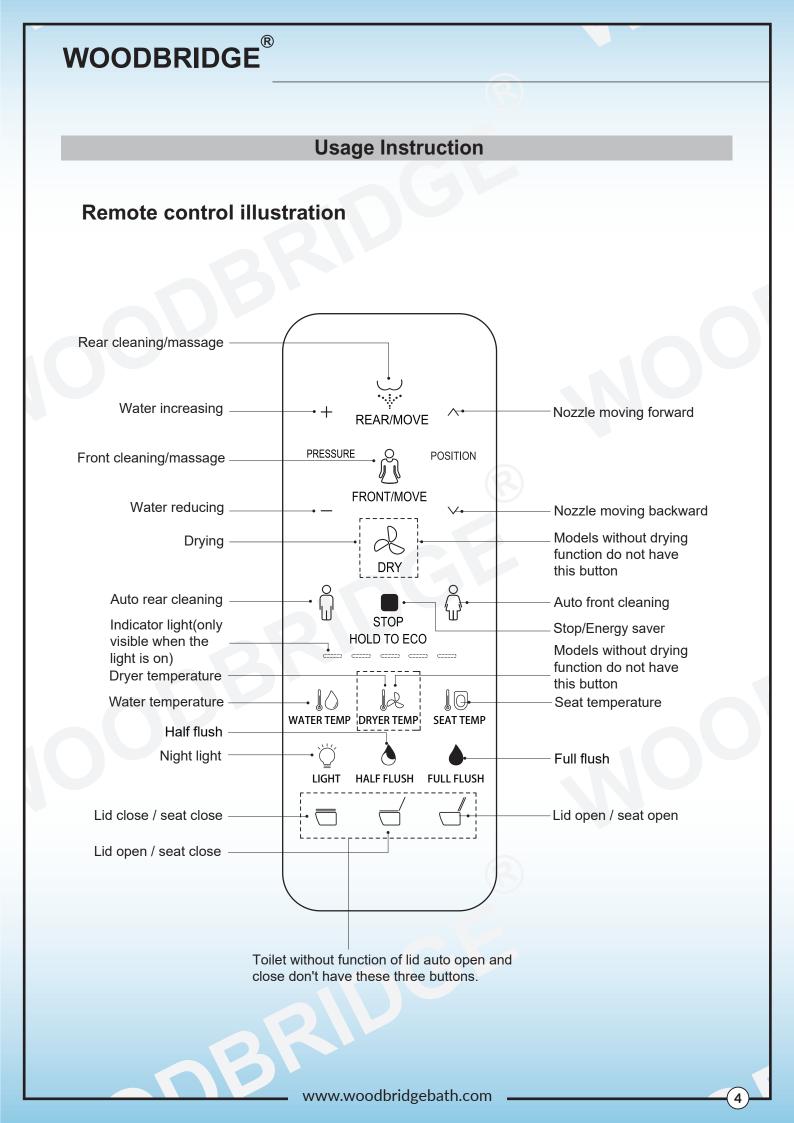

Usage Instruction

Rear/Front cleaning

WOODBRIDGE

Press "Rear cleaning/massage" button, the indicator light is on showing current water temperature level, it starts rear cleaning; Press again "Rear cleaning/massage" button to shift to massage to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses "STOP" button.


Press "Front cleaning/massage" button, the indicator light is on showing current water temperature level, it starts front cleaning; Press again "Front cleaning/massage" button to shift to massage cleaning (nozzle moves forward and backward to expand cleaning area). The cleaning will last for a circle and stop automatically, while it will stop immediately if the user presses "STOP" button.

During front/rear cleaning, long press "Rear cleaning/massage" or "Front cleaning/massage" button to turn on/off pulse cleaning mode. (This function only applies to product with pulse cleaning mode.)

Drying Operation (Only for toilets with drying function.)

R

• Press "Dry" button, the indicator light is on showing current wind temperature level, it starts drying; it will stop drying automatically after a circle or the user leaves the seat.

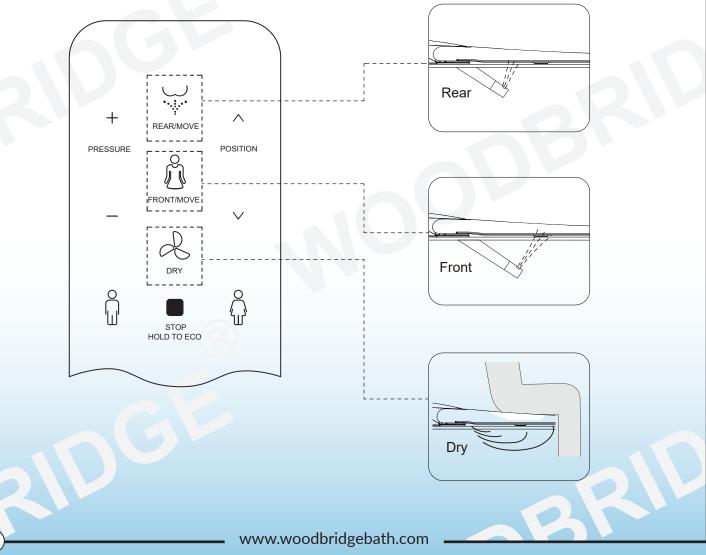

REMOTE CONTROL ILLUSTRATION

6

Usage Instruction

Water volume adjustment


WOODBRIDGE

Under Rear Cleaning or Front Cleaning function, press "+" or "- " button, the indicator light will be ON showing current water level, adjust water volume by 3 levels

Spray nozzle position adjustment

R

Under Rear Cleaning or Front Cleaning function, Presss " \land " or " \lor " button, the indicator light will be ON showing current nozzle position, adjust nozzle position by 5 levels

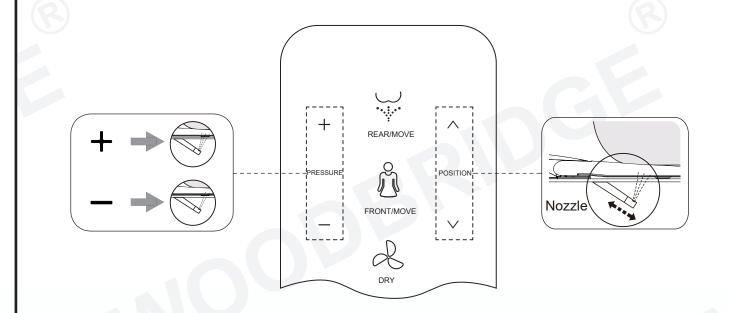

Usage Instruction

Energy saver

WOODBRIDGE

Keep pressing "STOP" button for more than 3S to enter energy saving mode, the indicator light will be off and energy saving light will be on. Keep pressing "STOP" button again for more than 3S to exit energy saving mode, the indicator light will be on and energy saving light will be off.

Energy saving

Under energy saving mode, seat temperature is low(level 1) to achieve energy saving. (Note: If the seat temperature before energy saving is neutral, keep the neutral after energy saving)


Remark

7

Energy saving mode will be suspended and goes to function mode if someone uses the seat in the middle of energy saving. The seat starts to heat immediately (without closing the seat temperature), and the energy saving mode is restored after the human body leaves the seat.

Auto function (Only for the toilet with auto flush function)

- The automatic function of factory default setting is middle level for water volume, nozzle position, water temperature, air temperature, seat temperature.
- Short press on the remote control button " \bigcup ", " \bigcup " can achieve male hip wash and female bidet wash, fully automatic and convenient use. The user can firstly set the water volume, nozzle position, water temperature gear position and air temperature gear position. After the setting is completed, press the corresponding automatic key 3s to save the setting. The next time you use it, you can call the saved key by pressing the corresponding automatic key. Set the automatic function to enable automatic cleaning and drying in the whole process.
- The Auto function mode will be off if the ueser presses other buttons during operation of auto functions and shift to operate the functions of the buttons.

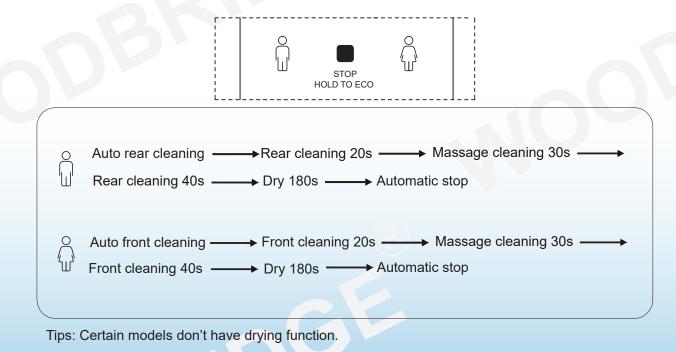

Usage Instruction

Temperature adjustment

WOODBRIDGE

· Water temperature adjustment


Short press the "WATER TEMP" button to adjust the water temperature. The indicator will show the water temperature level if it's on. When the indicator is off, the water level is 0. Short press this button to adjust water temperature level from 0 to 5 in cycle. (Note: the water temperature is set at $10\pm2.5^{\circ}$ C in level 0, that is, when the inlet water temperature is higher than 10° C, the water won't be heated, while when the inlet water temperature is lower than 10° C, the water will be heated to about 10° C.)

· Dryer temperature adjustment

Short press the "DRYER TEMP" button to adjust the dryer temperature. The indicator will show the dryer temperature level if it's on. When the indicator is off, the wind level is 0. Short press this button to adjust dryer temperature level from 0 to 5 in cycle. (Only for toilets with drying function.)

Seat temperature adjustment

Short press the "SEAT TEMP" button to adjust the seat temperature. The indicator will show the seat temperature level if it's on. When the indicator is off, the seat level is 0. Short press this button to adjust seat temperature level from 0 to 5 in cycle.



Night light (Only for toilets with night light function)

Short press "Night light" button to turn on/turn off night light, long press "Night light" button to enter into intelligent mode (Night light will be on or off by detecting the lightness of surroundings). If the product is on intelligent mode, short press "Night light" button to exit intelligent mode.




Half flush/Full flush (Only for the toilet with auto flush function)

· Short press "FULL FLUSH" button, the toilet starts full flushing.

- · Short press "HALF FLUSH" button, the toilet starts half flushing.
- · Long press "FULL FLUSH" button to turn on/off auto flush function. When the auto flush function is on, when it's detected that the user is seated for above 6s and leaves the seat for above 3.5s, it'll flush automatically.



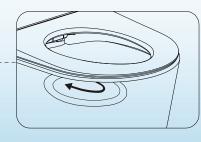

NOODBRIDGE [®] REMOTE CONTROL ILLUSTRATION		
Usage Instruction		
Auto lid open/close (Only for toilet with this function)		
· Press "" button to close seat cover.		
 Press " — " button to open lid and close seat. Press " — " button to open lid and seat. 		
 Long press "Lid close/seat close" button to turn on/off auto lid oper function. (This function is set to off by default and needs to be turn if it's needed.) 		
Lid close / seat close Lid open / seat open		
Lid open / seat close		

Water tank flush volume adjustment (only for toilets with water tank flush

volume adjustment function)

9

- Firstly press and hold the "Full Flush" key, and press the water volume "+" key to enter the full flush volume plus 1 gear adjustment;
- Firstly press and hold the "Full Flush" key, and press the water volume "-" key to enter the full flush volume reduce 1 gear adjustment;
- Firstly press and hold the "Half Flush" key, and press the water volume "+" key to enter the half flush volume plus 1 gear adjustment;
- Firstly press and hold the "Half Flush" key, and press the water volume "-" key to enter the half flush volume reduce 1 gear adjustment;

Tips: When adjusting to the highest or lowest gear, the buzzer beeps twice.

www.woodbridgebath.com

WOODBRIDGE[®]

10

Usage Instruction

Other Operations

User Code

- The user code needs to be set to avoid disturbance from remote controls when more than one smart toilets are used in the house. Turn on the toilet for setting while turning off others.Press user code combination buttons (Press "STOP" button first and then press "REAR" button) to enter user code setting mode, the indicator lights will be on and keep flashing.
- (RF remote control) The Remote control will generate matchinguser code automatically, press user code combination buttons again to exit setting mode and setting is completed. When the main unit is powered off to restart or change remote control batteries, user code won't be cleared and no need to reset.
- (IR remote control) Press water volume "+""-" buttons to select user code. The indicator shows the corresponding user code. Press the user code combination buttons again to save settings and exit. The buzzer beeps and it's set successfully. When the main unit is powered off to restart or batteries are removed from remote control, the user code will be cleared and need to be reset. After entering setting mode, if there's no operation for 10s, the remote control will exit setting mode automatically and return to previous states.

Quite mode

Long press "SEAT TEMP" button to turn on/off quite mode.

Auto deodorization

Long press "HALF FLUSH" button to turn on/off auto deodorization function. While the auto deodorization function is on, when it's detected that the user is seated, it'll start deodorizing and stops when user leaves above 3s. The auto deodorization function will turn off automatically during drying. (This function only applies to product with auto deodorization function. This function is set to on by default.)

Sterilization function

When user is not seated and cleaning/drying is off, long press "DRY" button to turn on plasma sterilization function. This function will stop automatically after 2 hours. During this mode, if any other button is pressed or user is seated, it'll stop automatically. (This function only applies to product with sterilization function.)

Automatic pre-wetting button

Press and hold the "STOP" button and press the "DRYER TEMP" button to turn on or off the automatic pre-wetting function. After the automatic pre-wetting function is turned on, the pre-wetting function is performed when the user is detected to be seated. (This button combination is only for toilets with automatic pre-wetting function)

Foot sense Switch

Firstly press and hold the "Stop" key, and press the "Full Flush" key to turn the foot sense function on or off. In the seated status, foot sense function is invalid.(this key combination is only for toilets with foot sense function)

APP Code matching

Press and hold "STOP" button and then press " \vee " button to start APP code matching.(This button combination only applies to product with APP)

Flush by water tank with electronic cover

Firstly press and hold the "Stop" key, and press the "water temperature" key to start the flush by water tank with electronic cover. (This key combination is only for the toilet with flush by water tank with electronic cover)

Remark:

- The buzzer will sound "BEEP" when the user presses one button which means the main unit receives the signal and conduct the operation accordingly. If the buzzer doesn't sound, it means the main unit doesn't receive the signal, please adjust the remote control direction and repress the button.
- In case of power cut during wand's spray operation, the wand cannot go back to place, please wait until the power is reset. In case of a power cut for a long period, please push the wand softly back by hand. Do not push hard, to avoid damage to wand and electrical machine.
- The body should touch the seat and the buzzer rings "CLICK", which means functions of front cleaning, rear cleaning and drying are in operation. The nozzle will continue to spray for 1-2 seconds after user stands up during spray operation, so please press "STOP" button before standing up.



Thank you for using WoodBridge products!

Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Time) Or Email: help@woodbridgebath.com

www.woodbridgebath.com

Update: 20241204