


# Installation Instructions

## MINI SAUNA (FOOT SPA)

**WOODBIDGE®**

**Model:FS100**

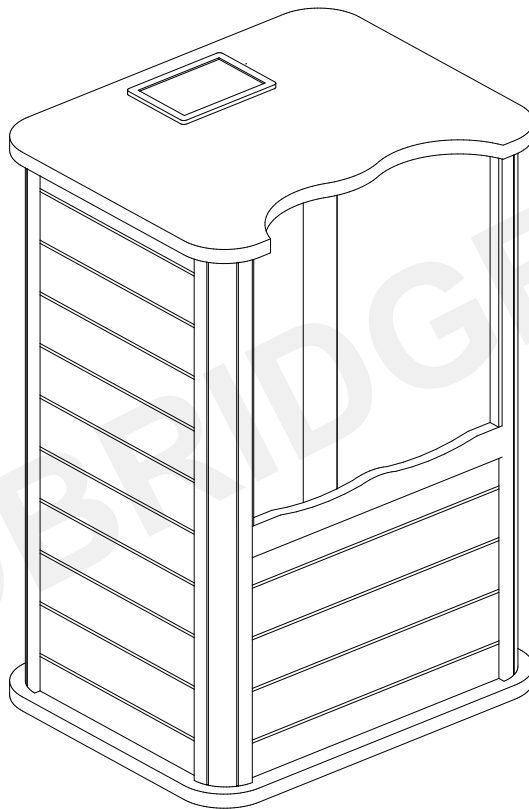

**READ ALL INSTRUCTIONS BEFORE UNPACKING THE PRODUCT**

INSTRUCTIONS THAT, IF IGNORED COULD RESULT IN DEATH OR SERIOUS INJURY CAUSED BY INCORRECT HANDLING OR INSTALLATION OF THE PRODUCT. THESE INSTRUCTIONS MUST BE OBSERVED FOR SAFE INSTALLATION.

We are not responsible for local code compliance for this product. Building and plumbing codes may vary from state-to-state in accordance to your location. We are not responsible for providing any compliance certifications.

Under no circumstances we are liable for any and all incidental damages sustained in connection with this product. Neither manufacturer, distributor or retailer is responsible for water damage or flood caused by the usage of this product.


Under no circumstances we are liable for any and all fees, cost of installation/reinstallation/removal, subsequent damages or transportation in case of the product defect.

The connection instructions in this manual are for general reference. The actual connections may vary by the type of sauna room you purchase.

## CONTENTS

Dimensions Data	-----	02
Specification and Model	-----	03
Work Environment	-----	03
Characteristics	-----	03
Performance Indicators	-----	03
User Guidelines and Operation Instruction	-----	04
Transportation and Storage	-----	05
Common Fault Handling	-----	05
Warranty	-----	06

## Dimensions Data

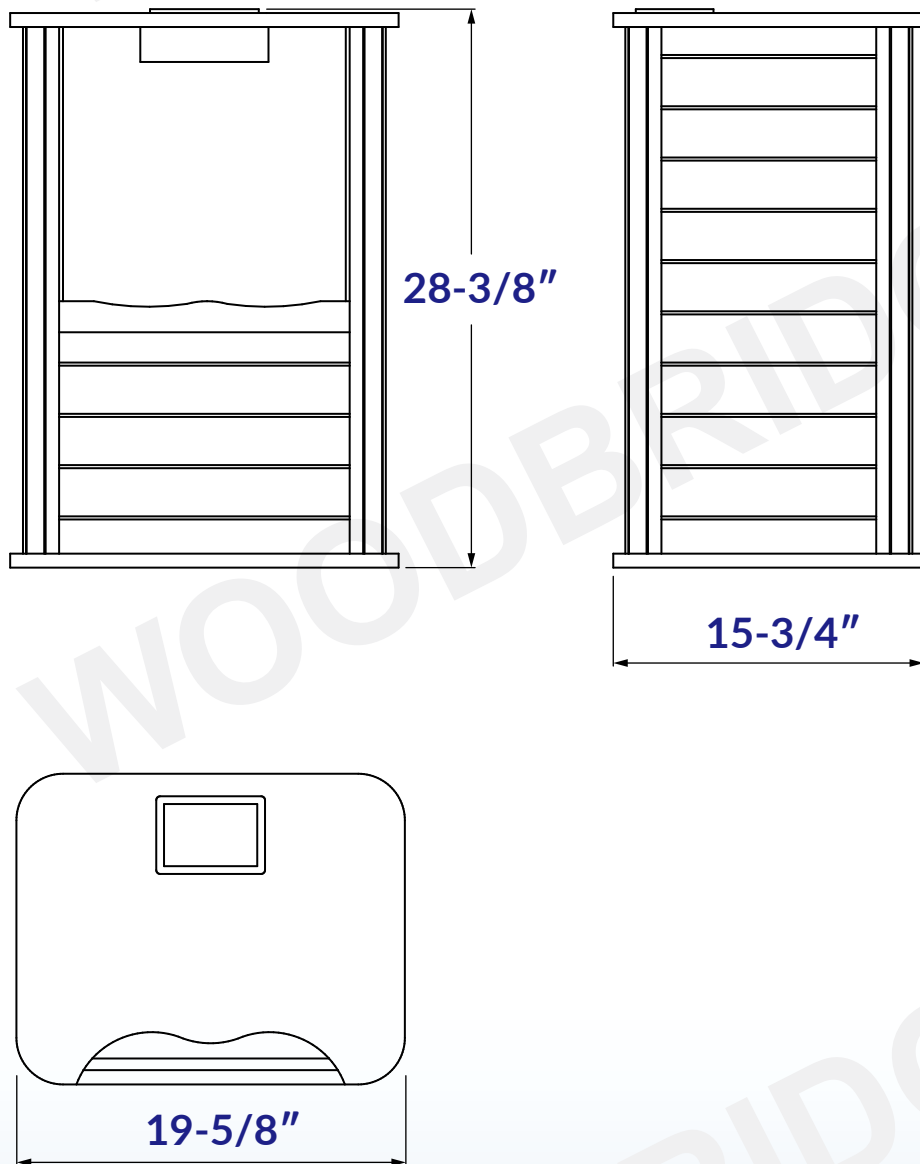

## Specification and Model

Model	FS100
Size	19-5/8"×15-3/4"×28-3/8"
Power	340W
Power Supply	120V 60Hz
Timing range	1-60min
Temperature	25°C-65°C (77°F-149°F)
Net weight	15KG (33lbs)

## Work Environment

1. Temperature: -5°C to 40°C (23°F to 104°F)
2. Humidity: ≤85%
3. Pressure: 70-106Kpa
4. Power Supply: AC120V 60Hz

## Characteristics

1. Oblong round barrel wooden structure.
2. Microcomputer digital control circuit with customizable time and temperature settings.
3. High-precision digital circuit with electronic light touch-button control.
4. Special ultra-long-life bionic nano carbon crystal spectrum heating system, optimized for human body absorption.

## Performance Indicators

1. Temperature control: adjustable from 25°C to 65°C (77°F to 149°F)
2. Time control: adjustable from 1 to 60 minutes.
3. Temperature control accuracy: ± 1°C(1.8°F).

## User Guidelines and Operation Instruction

### Important Notes

1. Check that the circuit and socket meet the equipment's load and voltage requirements.
2. Set the temperature and time for the biological spectrum foot bath bucket based on individual circumstances and environmental conditions.
3. It is recommended to operate the product for 4 hours followed by a 1-hour downtime to effectively extend its lifespan.
4. When using the product, place a bath towel on the foot pedal.
5. After use, please turn off the instrument and unplug the power cord.

### Operation Method

1. Plug the instrument into a dedicated three-port socket.
2. Press the power touch "Switch" key. The control panel will display 60 minutes and 30°C (86°F), allowing you to enter the setup interface. After 8 seconds, the current temperature measured in the bucket will be shown, with the countdown timer displaying 60 minutes.
3. To set the temperature, press the "Temperature" key to select a desired temperature within the range of 25°C to 65°C (77°F to 149°F). It is generally recommended to set the temperature to 55°C (131°F) for optimal results.
4. To set the time, press the "Time" key to select a desired duration within the range of 1 to 60 minutes. It is generally recommended to set the time to 60 minutes. When the countdown reaches "00," the instrument will stop working.
5. To stop the operation at any time, press the "Switch" key to turn off the power and unplug the device.
6. After use, always unplug the power supply.

### Precautions and Maintenance

1. Do not allow individuals who are not self-sufficient, those unable to operate it independently, or infants to use the product.
2. If you feel uncomfortable or notice any abnormal sensations in your body or skin, stop using the product immediately.
3. For prolonged use, adjust the temperature appropriately to avoid low-temperature burns.
4. Do not sit or stand on the product.
5. Do not use or store the product in bathrooms or areas with high humidity.
6. Do not add water to the product or wash it with water.
7. When handling the product, use both hands to prevent slipping and potential damage.
8. Never put your head inside the product.
9. Do not use it under a quilt.
10. After use, cover the product with a bag to prevent dust accumulation, and store it in a dry place. Allow the bath towel to dry thoroughly after use.
11. The instrument should not be wiped with a wet cloth. Always turn off the power to avoid electric shock.

## Transportation and Storage

- 1. Transportation:** The product should be prevented from rain, splashes, and strong impacts. It should not be transported with corrosive materials and must comply with national transportation regulations.
- 2. Storage:** Store the product in a well-ventilated, dry area and free from corrosive substances.

## Common Fault Handling

Issue	Possible Causes	Maintenance Method
No display of temperature and time after power on	The power cord is unplugged	Reconnect the power cord
	The Power outlets are not energized	Repair or replace the electrical outlets
	The computer control board is a failureworking	Replace the computer control board
The Time is not counting	The time is set to "00"	Reset the time to a value between "1-60"
The Temperature is not counting	Temperature set to "0"	Reset the temperature to a range of "25°C-65°C (77°F-149°F)"
The Heater is not heating	The Heater is damaged	Replace the heater with a new one

# WARRANTY

**Woodbridge warrants its products as listed in below to be free of material and workmanship defect, subjected to the limitations set forth in this limited warranty.**

- **Bathtub, Whirlpool/Air Bubble Massage Tub, Wooden Cold Plunge: 1 Year limited to be free of defects in material and workmanship.**
- **Toilet and Bidet: 1 Year limited to be free of defects in material and workmanship.**
- **Faucet: 1 Year limited to be free of defects in material and workmanship.**
- **Vanity: 1 Year limited to be free of defects in material and workmanship.**
- **Granite, Marble, Engineered Quartz Vanity Top: 1 Year limited to be free of defects in material and workmanship.**
- **Medicine Cabinet, LED Mirror: 1 Year limited to be free of defects in material and workmanship.**
- **Stainless Steel Sink: 1 Year limited to be free of defects in material and workmanship.**
- **Solid Surface Shower Wall Panel, Shower Base and Vanity Top: 10 Years limited warranty to be free from material defects.**
- **Shower Door: Lifetime warranty on glass components and 1Year limited on other hardware.**

**This limited warranty is non-transferable and only applies to products purchased and installed in the United States and Canada.**

This limited warranty excludes all industrial, commercial and business usage. Proof of purchase (original sales receipt) from the original purchaser, Description and pictures of defect, model number or model description must be provided to Woodbridge Bath for all warranty claims and Woodbridge Bath IS NOT responsible for labor cost, removal or installation costs.

This limited warranty shall not apply to goods which have been subject to accident, negligence, improper installation, product abuse, product misuse, or use of cleaners containing abrasives, alcohol or other organic solvents, whether performed by a contractor, service company, or yourself, are excluded from this warranty.

This warranty does not cover surface damaged caused by use of chemicals that break through or dissolve the surface finish or damage caused by the accidental dropping of sharp or heavy objects. Improper care and use of abrasive cleaners and will void the warranty.

During this limited warranty period if a malfunction occurs and after inspection it is determined that a defect developed during normal use, Woodbridge will as at its election proceed with any of the following options:

- (1) repair or replace the defective part(s) or product(s) at cost
- (2) issue a refund of the original purchase price of the product(s) (Valid within 30 days from the date of purchase)
- (3) issue a credit to be applied toward the purchase of a new product. Shipping/delivery charges may apply and are in sole discretion.

#### Caution:

NEVER use cleaners containing abrasive cleaners, ammonia, bleach, acids, waxes, alcohol, solvents or other products that are not recommended for Chrome finish will void the warranty.

Woodbridge products should be installed by a fully insured and licensed contractor only. Installation by anyone other than fully insured and licensed contractor will void this limited warranty.

## RESPONSIBILITIES OF OTHERS

Inspecting the unit prior to installation is the responsibility of the installer or building contractor who acts on behalf of the user. They are responsible for ensuring the unit is free of defect or damage. Notices are placed on the unit and on the shipping carton advising the installer of this responsibility. In the event of a problem, the unit must not be installed. Woodbridge is not responsible for failures or damage that could have been discovered, repaired, or avoided by proper inspection and testing prior to installation.

Damage occurring in transit is the responsibility of the carrier. The user or installer MUST open the crate and inspect the unit for damage when it is delivered. If damage is discovered, it must be reported immediately to the seller and the carrier in writing, and an inspection requested. Failure of the carrier to respond should be reported to the seller and the carrier. Your freight claims should be filed promptly thereafter.

This limited warranty does not cover any liability for consequential or incidental damages, all of which are hereby expressly disclaimed, or the extension beyond the duration of this limited warranty of any implied limited warranties, including those of merchant ability or fitness for an intended purpose.

## DISCLAIMER

Except as expressly provided, there shall be no warranty or obligation, express or implied, oral or statutory. No dealer or other person has the authority to make any warranties or representations concerning or its products. In no event shall be held responsible for any such warranties or representations.

Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion on limitation of special, incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights, you may also have other rights which vary from state/province to state/province.

To obtain warranty and replacement parts, please send e-mail to [help@woodbridgebath.com](mailto:help@woodbridgebath.com) with the original receipt information, Woodbridge will determine whether to repair or replace your product, issue a refund or issue a credit.

**IMPORTANT!**

**DO NOT USE:** Abrasive cleaners such as: acid, ammonia, bleach, and similar solutions. Use of such solutions may cause corrosion, finish peeling, and/or dull the surface.

**DO NOT USE:** Abrasive sponges or cloth. Never use steel, wool, or wired brushes that will permanently scratch the

---

**Retain these installation instructions for future reference!**

---

Thank you for using WOODBRIDGE products!

**WOODBRIDGE<sup>®</sup>**

California (Norwalk) Distribution Center  
15600 Blackburn Ave, Norwalk, CA 90650

New Jersey (Somerset) Distribution Center  
635 Pierce St, Somerset, NJ 08873

Florida (Orlando) Distribution Center  
13645 S Orange Ave, Orlando, FL 32824

Canada (Ontario) Distribution Center  
615 Orwell Street, Unit B, Mississauga, ON L5A2W4, Canada



**Please don't hesitate to contact us if you have any questions or concerns.**

**Customer Service Phone: 562-229-0088. (Monday - Friday 9 AM - 5 PM Pacific Standard Time)**

**Or Email: [help@woodbridgebath.com](mailto:help@woodbridgebath.com)**